

## 6. Case Dimensions

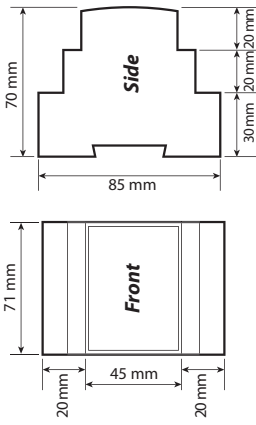


Figure 6: Case Dimensions

## 7. Technical Data

### Setting Ranges

Undervoltage : Off, 1% – 25%  
 Time delay for undervoltage : 0.1s – 30s  
 Overvoltage : Off, 1% – 20%  
 Time delay for overvoltage : 0.1s – 30s  
 Start time delay : 0s – 999s

### Power Supply Input

Phase voltage : 220V(-25%) - 240V(+20%) AC  
 MU150-240V : 100V(-25%) - 120V(+20%) AC  
 MU150-110V : 45Hz to 65Hz  
 Supply frequency : 2.5VA  
 Maximum power consumption

### Contacts

Contact arrangement : Change-over  
 Contact rating : 5A, 250V AC (cos =1)  
 Contact material : Silver alloy  
 Operating time : 15 ms max  
 Expected electrical life : 100,000 operations at rated current  
 Expected mechanical life : 5 x 10<sup>6</sup> operations

### Indicators

Auxiliary supply : Green LED indicator  
 Pickup indicator : Red LED indicator  
 Trip : 7-segment display and red LED indicators

### Mechanical

Mounting : Din rail mounted  
 Approximate weight : 0.27kg

### Accuracy

Protection thresholds : ± 3 %  
 Time delay : 0-0.5s, ± 15% with a minimum of 40ms  
 Measurements : 0.6s and above, ± 3%

## MU150 Single Phase Voltage Relay User's Guide V2

### Brief Overview

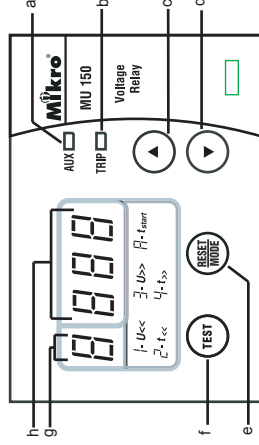


Figure 1: Front panel overview

a – Auxiliary power supply LED

b – Trip/Pickup LED

c – Up key

d – Down key

e – Reset/Mode key

f – Test key

g – Function LED

h – Data LED

### Symbols

U<< - Undervoltage

t<< - Undervoltage time delay

U>> - Overvoltage

t>> - Overvoltage time delay

⏏ - Unbalance/phase

⏏ - Unbalance time delay

The Data LED showing value. Press "Up" or "Down" to scroll through the parameters as shown in Figure 2.

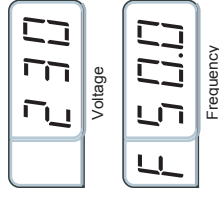


Figure 2: Voltage and frequency display. 230V and 50.0Hz shown as example

### a) Auto Scroll

Auto scroll let the display to scroll between voltage and frequency reading every 10 seconds. To toggle auto scroll mode, press "Up" and "DOWN" simultaneously.

## 1. General Description

MU150 is a voltage relay that combines overvoltage, undervoltage and delay start functions.

MU150 incorporates a 4-digit LED display which allows direct numerical readout of set values, actual measured value and system indication.

MU150 has 2 relay outputs (R1 and R2). R1 is energized under normal operating condition. R2 can be configured as normally energized or de-energized. Both R1 and R2 can be assigned to operate separately by various tripping elements.

## 2. Voltage and Frequency Display

During power up, when the relay is not under tripping condition, the display will show voltage and frequency reading.

### 3. Settings

#### a) Setting Display

When the relay is not under tripping condition, pressing "RESET/MODE" can scroll through various settings. Function LED showing number or alphabet to indicate which setting is being view as shown in Figure 3. Table 1 gives description of each setting.

**Tip:** To quickly jump back to voltage display during setting display, press and hold "RESET/MODE" for more than 1.5 seconds.

#### b) Programming Setting

Step 1: Press "RESET/MODE" until the Function LED shows the required setting.

Step 2: Press "UP" and "DOWN" simultaneously to enter programming mode. The Function LED blinks to indicates the relay is in programming mode.

Step 3: Press "UP" or "DOWN" to select the desired value.

Step 4: To save the selected value, press "UP" and "DOWN" simultaneously again. It will exit the programming mode with the Data LED displaying the newly set value.

To exit programming mode without saving the selected setting, press "RESET/MODE" once.

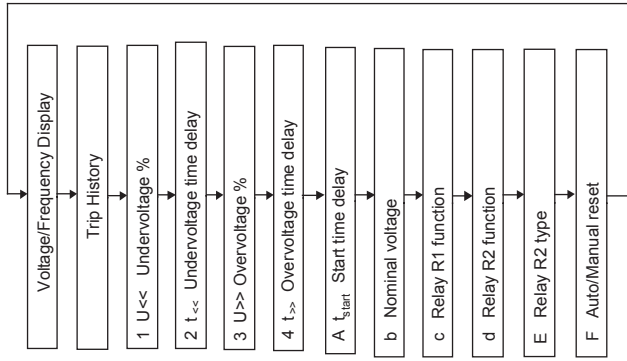


Figure 3: Display mode when pressing Reset/Mode

Setting	Function	Setting Range	Description
1	U<< Undervoltage	off, 1-25 %	Undervoltage % from nominal voltage
2	t<< Undervoltage delay	0.1-30 s	Time delay for undervoltage
3	U>> Overvoltage	off, 1-20 %	Overvoltage % from nominal voltage
4	t>> Overvoltage delay	0.1-30 s	Time delay for overvoltage
A	tstart Starting delay	0-999 s	On time delay of R1 during power up
b	Nominal Voltage	240V: 220,230,240 V 110V: 100,110,120 V	Nominal voltage
c	Relay R1 function	0-3	*Refer to Table 2
d	Relay R2 function	0-3	*Refer to Table 2
E	Relay R2 type	0-1	0: Normally de-energized 1: Normally energized
F	Auto/Manual reset	0=auto, 1=manual	auto: auto reset when trip condition clear manual: press "RESET/MODE" to reset

Table 1: Description of functions

#### c) Undervoltage

Undervoltage pickup occurs when voltage is less than [nominal voltage - U<< %], relay trips when delay time is elapsed.

#### d) Overvoltage

Overvoltage pickup occurs when voltage is more than [nominal voltage + U>> %], relay trips when delay time is elapsed.

#### e) Starting Delay

Starting delay is the delay time for R1 to turn on during power up under normal condition.

#### g) Relay Function Selection

During tripping, output contact relay R1 and R2 will be de-energized/energized if the related tripping element is activated. The setting is shown below:

Code	OV	UV	Code : Displays on Data LED
0	0	0	OV : Overvoltage
1	0	1	UV : Undervoltage
2	1	0	0= De-activated
3	1	1	1= Activated

Table 2: Relay function selection

### 4. Trip

#### a) Trip Display

During pickup, Trip/Pickup LED blinks. During tripping condition, Trip/Pickup LED on. Function LED and Data LED blinks with trip source as shown below.

Function LED	Data LED	Description
1	trip voltage	Undervoltage trip
3	trip voltage	Overvoltage trip
t	EST	Test

Table 3: Trip display

#### b) Trip Reset

During tripping condition, press "RESET/MODE" to reset the relay, the relay will reset if condition permits. If relay is set to Auto reset, the relay will reset automatically if the condition is 5% below trip condition.

#### c) Trip Test

Trip test is used to simulate a tripping condition. Press "TEST" button and hold for 1.5s, trip LED blinks. After 1.5 seconds, "EST" will blink, R1 off and R2 will operate by relay R2 type. Press "RESET/MODE" to reset.

#### d) Trip History Display

During Voltage and frequency display, Press "RESET/MODE" button to jump to Trip History Display. Display shows the previous trip status with a 'dot' blinking at Function LED. To clear trip history, press "UP" and "DOWN" simultaneously.

#### e) Trip Bypass Mode

To disable tripping due to incorrect setting, press "RESET/MODE" and "TEST" simultaneously during power up. The Trip LED slow blink to indicate Trip Bypass Mode. Go into programming mode to correct the setting. Power off and on to reset the relay. The relay will return to normal if no button is pressed for longer than 2 minutes.

### 5. Typical Application Diagram

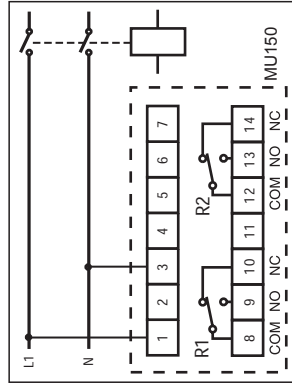


Figure 4